



# 3M™ 9926 Valved Nuisance Level Acid Gas Respirator

## Fitting Instructions



### 3M 9926 Valved Nuisance Level Acid Gas Respirator

Standard: EN149

Type: FFP2

Maximum Usage Levels:


10 x WEL for Particulates\*

Offers relief against low level (below WEL) acid gases with good warning properties.

Approval: CE marked

\*Assigned Protection Factor (APF) as detailed in EN529

This respirator should not be used in oxygen deficient environments, for escape purposes or by people with beards/facial hair or in atmospheres where concentrations of contaminant may exceed that deemed Immediately Dangerous to Life or Health (IDLH).

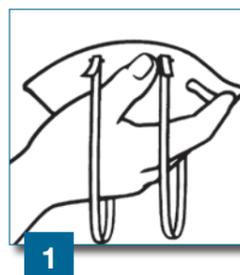

1. Cup the respirator in your hand with the nose piece at your fingertips, allowing the headbands to hang freely below your hand.



2. Position the respirator under your chin with the nose piece up.



3. Pull the top strap over your head resting it high at the top back of your head. Pull the bottom strap over your head and position it around the neck below the ears.

4. Place the fingertips of both hands at the top of the metal nose piece. Mould the nose piece to the shape of your nose by pushing inwards while moving your fingertips down both sides of the nose piece. Pinching the nose piece using only one hand may result in less effective respirator performance.

5. The seal of the respirator on the face should be fit-checked prior to wearing in the work area.

a) Cover the front of the respirator with both hands being careful not to disturb the position of the respirator.

b) Inhale sharply. If air flows around the nose, readjust the nose piece as described in step 4. If air leaks at the respirator edge work the straps along the sides of the head. If you CAN NOT achieve a proper fit DO NOT enter the contaminated area. See your supervisor.

